

---

## Storing Balancing Jobs

---

<p>Balancing jobs can only be stored / assigned to a measurement point.          Make sure that the following setting is not selected in OMT. Otherwise, OMT will only allow one balance job to be stored to a single measurement point.</p>	
Step 1.	Open <b>OMT</b>
Step 2.	Select <b>Options</b>
Step 3.	Select <b>General Settings</b>
Step 4.	Select <b>Multi Mode Import</b>
Step 5.	Select <b>General</b>
Step 6.	Make sure that the “ <b>When possible Merge Imported Data With Existing Task</b> ” is not selected
<p>The balance data can be stored / assigned to a measurement point by drag and drop using the “<b>Upload Multimode to PC</b>” function.</p>	