

TechNote #CM13 OMNITREND®

Overview of short commands in the graph window (valid from OMNITREND version 2.32)


Introduction

Functions that are frequently used for signal evaluation can be conveniently called up at the touch of a key.

This TechNote shows you which buttons are assigned to which functions, and what to bear in mind when you call up a function.





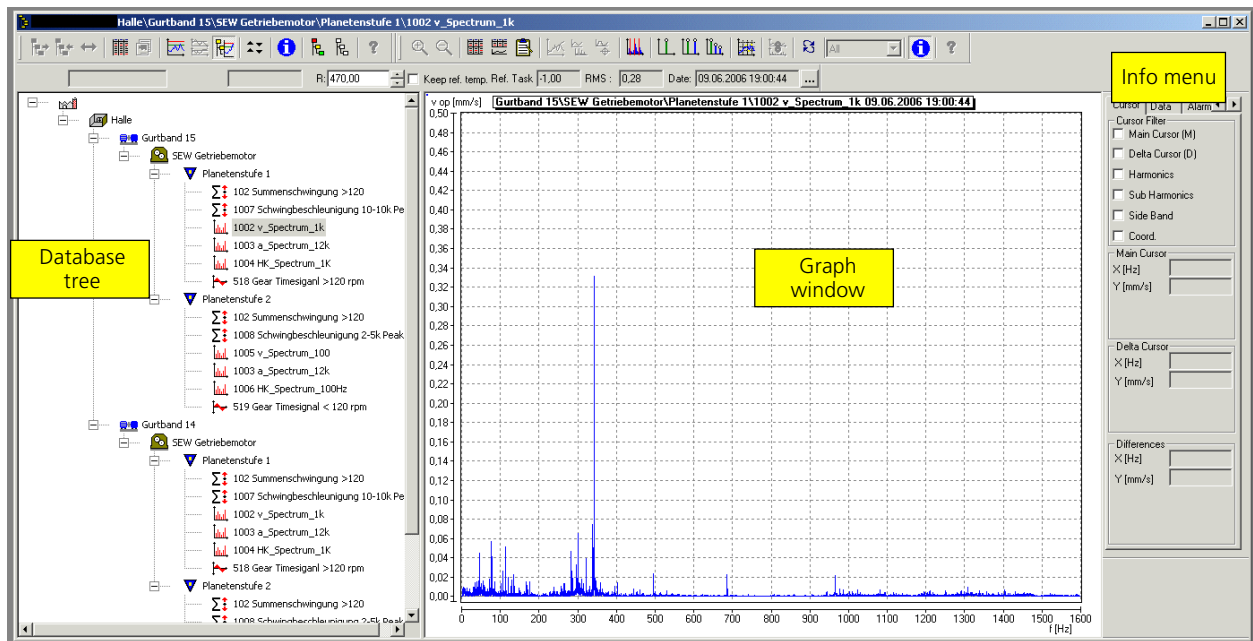







Notes

- To use the short commands, the graph window being evaluated must be active. Click on it with the mouse to make sure it is active.
- The short commands are available in both the full screen view and in the QuickView display.



Signal graph in the QuickView display

Key	Function	Signal type
I	- Consecutively display the frequency marker sets - Show / hide Info menu	- Spectrum - All except spectrum
P	- Display the 10 highest amplitudes ('max. 10')	- Spectrum
Q	- Change the scale of the X-axis: Hz or CPM -> Order	- Spectrum

Key	Function	Signal type
	- Change the scale of the Y-axis: Acceleration -> Velocity -> Displacement	- Spectrum
	- Adjust the reference speed	- Spectrum
	- Display waterfall graph in a 3D or in a 2D view (cascading or overlaying spectra)	- Spectrum
	- Show/hide the label of the measurement curves (rms, p-p, etc.) and limit values	- All except spectrum and time waveform
 	- Show main (M) or delta (D) cursor	- Spectrum and time waveform
  	- Show cursor for harmonics (H), sub-harmonics (X), side bands (S). Together with shift key ('SHIFT'): Hide cursor again.	
 	- Consecutively display the signal measurements of a measurement task and leaf forward or back through the measurements. Together with the shift key ('SHIFT'): Display oldest or most current signal measurement.	- Spectrum and time waveform
	- Call up the next entry in the database tree. Together with the SHIFT key: Call up previous entry. Together with the CTRL key: Browse through the open OMNITREND windows (Database tree window must be active).	- All